



DISPLAY PANEL - DASHBOARD

 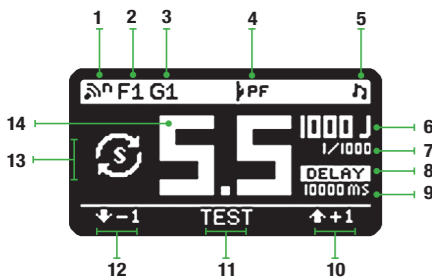


- 1 EL-Skyport synchronisation normal/ speed
- 2 EL-Skyport Frequency channel
- 3 EL-Skyport Group number
- 4 Photocell status
- 5 Ready beep
- 6 Power in J
- 7 Flash duration in s
- 8 Flash function
- 9 Flash function value
- 10 Increase 1 f-stop (R)
- 11 Open flash test (S)
- 12 Decrease 1 f-stop (L)
- 13 Recycling mode
- 14 Power in f-stop equivalent



DISPLAY PANEL - MAIN MENU

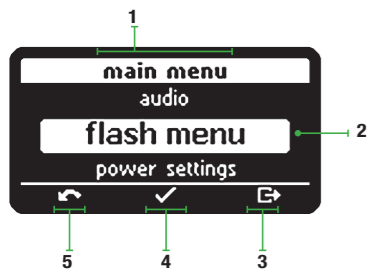

- 1 Menu title
- 2 Menu selected
- 3 Menu exit (back to dashboard) (R)
- 4 Enter (S)
- 5 Back (L)



	1° level	2° level	3° level
photocell	off/on		
	preflash		
	preflash setup	auto	manual block time timeframe
skyport (radio)	off (r.0)		
	normal (r.1)		
	speed (r.2)		
	group	group 1 to 4	
frequency	frequency 1 to 20		
audio	beep volume	off low min default high max	
	beep tone	Tone (0 to 10)	
	key click	off low default high max	
flash mode	default		
	sequence	unit index total units seq. timeout	
	delayed	set delay (in ms)	
	strobo	frequency duration	
	setting	Setup of activated mode	
power settings	recycling time	slow default fast	
	auto standby	from[off] to [60min] in steps of 5 min	
	auto off	from[off] to [10hrs] in steps of 1 hour	
statistics	unit usage	flash count	

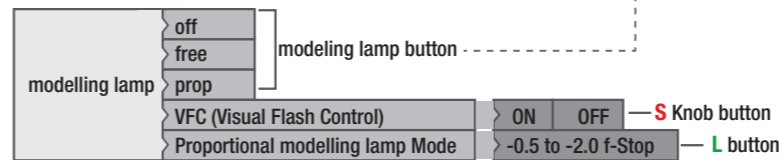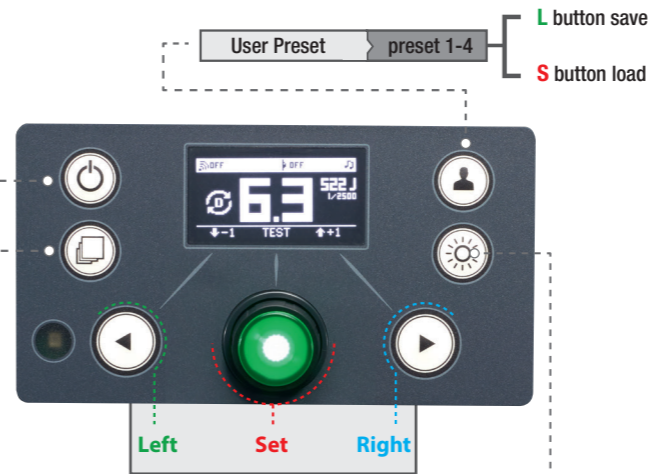


Added possibility to enable / disable flash before ready.

- When "ENABLED", the Strobe mode will work at the fastest possible speeds.
- When "DISABLED", flashes can be only released when the charge level is reached. The priority is on accurate exposures.

Activation: when unit is OFF, press and hold ON + knob button (S) until message "ENABLED" is shown, to return to "DISABLED" repeat the programming procedure, the show value is automatically saved as standard setting for the unit.

DISPLAY PANEL - MODELING LAMP

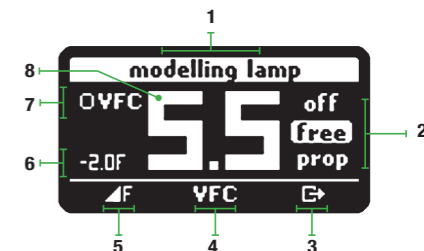

- 1 Setting title
- 2 Modelling lamp status
- 3 Back to dashboard (R)
- 4 Visual Flash Confirmation function (S)
- 5 Proportional modelling lamp setup (L)
- 6 Proportional modelling lamp value
- 7 Visual Flash Confirmation status
- 8 Modelling lamp power in f-stop


KNOB COLOR INFO



Knob button (S)

DISPLAY	DESCRIPTION
GREEN	ready
GREEN BLINKING	discharging
ORANGE	charging
RED BLINKING	flashing before 100% ready
RED BREATHING	standby

CONTROL PANEL

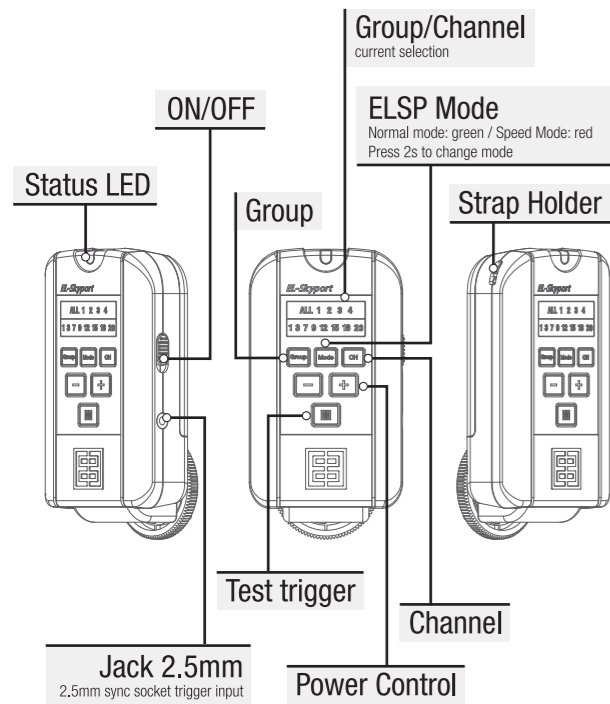

ERROR MANAGEMENT

ERROR NUMBER	DESCRIPTION	SOLUTION
1	Capacitor over voltage	Switch the unit off, wait 2 minutes and switch the unit on again. If the error shows up again the unit requires a check up at an authorized Elinchrom service centre.
2	Over heat	Wait until the unit has cooled down. The unit will switch back to the normal operation as soon as the temperature decreases to a normal working level.
3	Discharge error	Switch the unit off, wait 2 minutes and switch the unit on again. If the error shows up again the unit requires a check up at an authorized Elinchrom service centre.
4	Charge timeout error	
5	Zero detect fault	
6	Charge hold error	The unit has detected a mains supply fault. Please check the mains/battery supply. It could be not working correctly.
8	Fan error	
10	Supply input voltage too high	Switch the unit off, wait 2 minutes and switch the unit on again. If the error shows up again the unit requires a check up at an authorized Elinchrom service centre.
11	Supply input voltage too low	
12	Supply under voltage detected until charge	
13	Over current detection	Switch the unit off, wait 2 minutes and switch the unit on again. If the error shows up again the unit requires a check up at an authorized Elinchrom service centre.
15	Temperatur sensor "Heat Sink" not connected	
16	Temperatur sensor "Front" not connected	
17	Temperatur sensor "Charge" not connected	Switch the unit off, wait 10 minutes and switch the unit on again. If the error shows up again the unit requires a check up at an authorized Elinchrom service centre.
20	Power Board not connected / found	
24	Capacitor voltage symmetry error	Switch the unit off, wait 2 minutes and switch the unit on again. If the error shows up again the unit requires a check up at an authorized Elinchrom service centre.
28	Flash tube after glow	
29	Auto Ignition on Charge	
30	Auto Ignition on Ready	

DOWNLOAD CONFORMITY

Please find the declaration for EC conformity and USA & Canada conformity on the Elinchrom website. <http://bc.gs/ec>



DOWNLOAD THE ELC USER GUIDE

Please get the complete user guide at this link: <http://bc.gs/27>



is a registered trademark of ELINCHROM LTD, RENENS, SWITZERLAND

Quick Start Guide

ELC Pro HD



Elinchrom LTD - ELC Pro HD
 Av. de Longemalle 11, P. O. Box -458, CH-1020 Renens, Switzerland,
 Tel. : + 41 21 637 26 77 Fax: +41 21 637 26 81 E-mail: elinchrom@elinchrom.ch
www.elinchrom.com

Elinchrom SA - ELC Pro HD - 05.2018 (73019)